



Instructions

How to Replace Heater Elements


Version: NEW 2+ BUBBLE SPA

DU MÅ BENYTTET DEG AV LOKAL ELEKTRIKER VED REPARASJONER AV DITT MSPA.







1. Take off water inlet and outlet caps

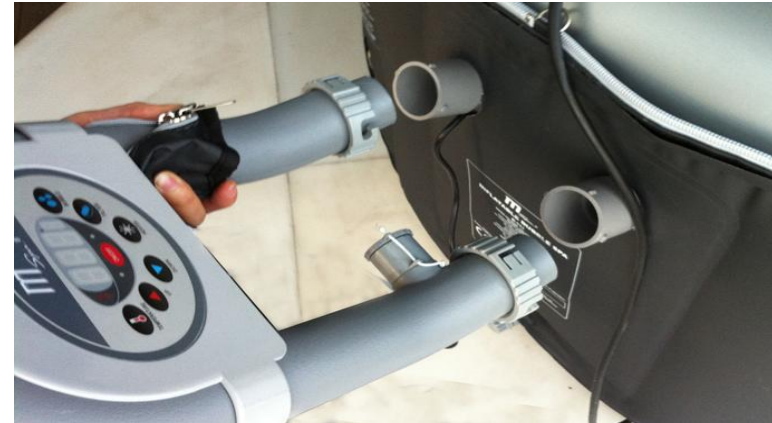

2. Remove the air pipe

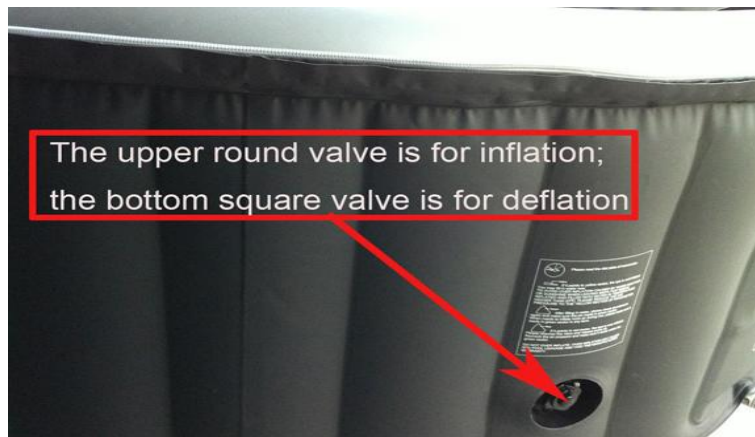

3. Deflate spa pool

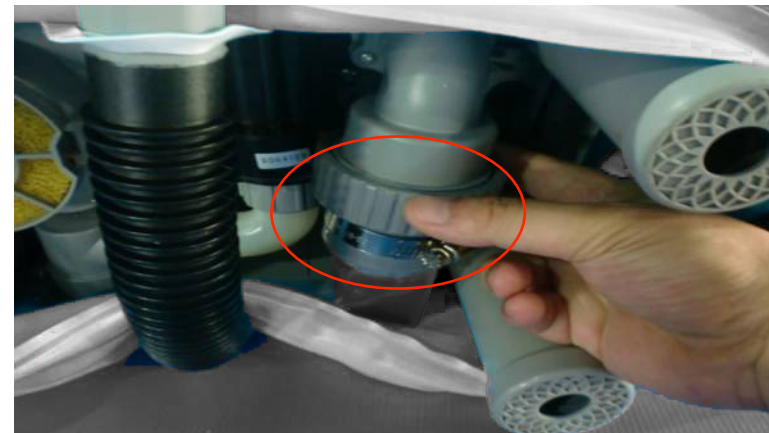

4. Unscrew the check valve plastic nut



5. Take out control box from spa pool




6. Remove the foam




7. Loosen four screws on the top lid




8. Disassemble the mid part of the control box

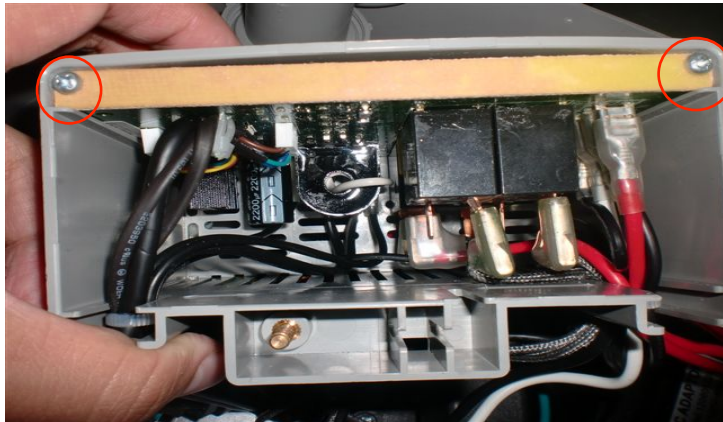

9. Take out the power board from the case

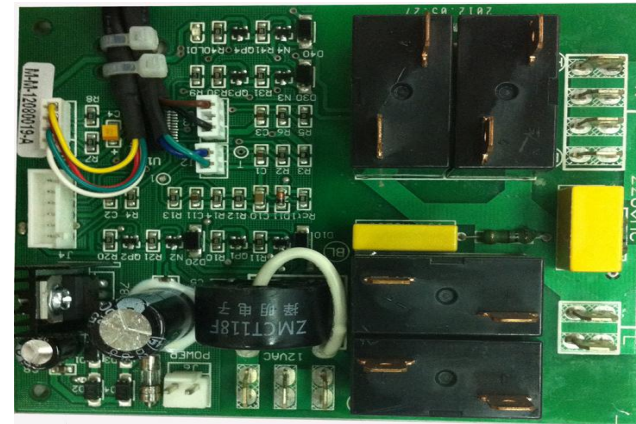

10. Unplug heater elements cables on the power board

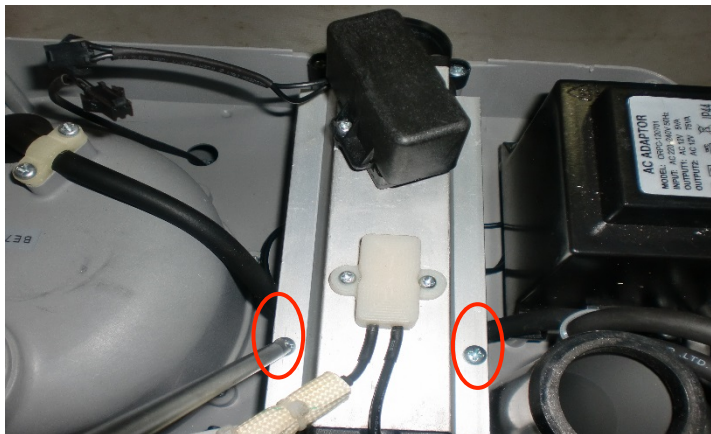

11. Unscrew four screws that place heater elements onto the control box.



12. Take out the original heater elements from the control box and assemble the new heater elements in reverse order.

